



BASO Gas Products LLC

## Thermopile Instructions

**Turn off the gas supply to the equipment prior to servicing.**

**BASO thermopile replaces 600 - 750 millivolt Honeywell and Robertshaw pilot burners**

Replacement Step:

1. Disconnect the lead wire of the thermopile from the gas valve.
2. From the pilot burner, un-screw the nut adapter or pull out clip adapters.
3. Insert the new thermopile into the pilot burner and attach either the nut or clip depending on the pilot burner.
4. Connect lead terminal to the gas valve.
5. Follow the lighting instructions from the original equipment manufacturer.
  - a. stable flame with blue coloring
  - b. that the thermopile has correct flame impingement
  - c. the flame is heating the upper 3/8" of the thermopile tip

