




BASO Gas Products LLC

## B04S-5E001 Universal Replacement Kit

### Universal Kit Contents

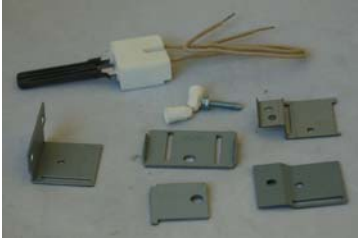


### Proper Installation Procedure:

1. Disconnect electrical power and gas supply to appliance or furnace and remove existing igniter.
2. Cut the two wires of the existing igniter 3-4 inches from ceramic block.
3. Compare the old ceramic block with the new parts in kit and select the appropriate metal bracket to best match the original igniter. See photos shown below.
4. Connect existing wires to the new igniter and use the two ceramic wire nuts to complete the connection. Ensure that the two wire nuts are tightly secured for proper electrical connection.
5. Re-install the new igniter in the reverse order of removal.
6. Test the appliance or furnace several times for proper ignition.

DO NOT USE THIS IGNITER FOR ANY OTHER APPLICATION.

### Original

### Replacement

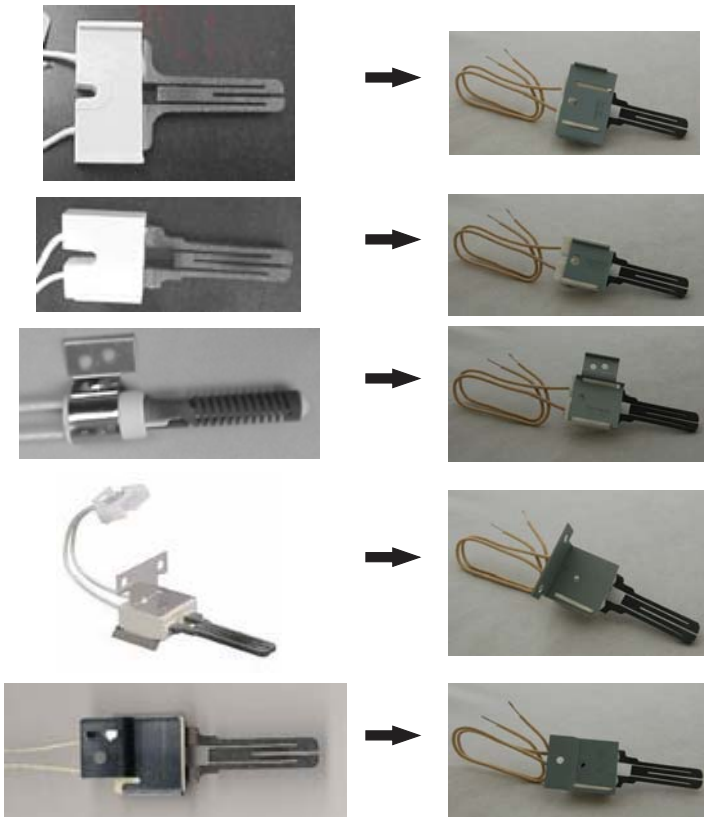

B04S-5E001 Universal Cross Reference Sheet		
<b>Amana</b>	<b>Majestic</b>	<b>Superior Fireplace</b>
10735002	75-92-104	94851
<b>Armstrong</b>	75-92-105	<b>Trane</b>
38322B001	<b>Metzger</b>	3400339P01
<b>Clare Brothers</b>	201N	B340039P01
C238	201W	B12996P01
C238-1	<b>Mor Flo</b>	B144676P01
<b>Coleman/Evcon</b>	3200618	B144676P02
14740511	<b>Nordyne/Tappan</b>	B138196P01
14740512	<b>Frigidaire/Philco</b>	IGN21
<b>Detroit/</b>	<b>Intertherm/Miller</b>	IGN23
<b>Brant Radiant</b>	903110	IGN26
201D	105141000	IGN28
<b>DMO/Olsen ECR</b>	RH622286893	IGN30
<b>Industries</b>	632-0770	IGN34
26789	632-0880	<b>Viessmann</b>
20834	902661	9302-093
<b>Dornback</b>	902694	9302-094
271W	903758	<b>Wayne Home</b>
<b>Ducane</b>	632-3811	<b>Equipment</b>
20015201	632-3540	62821-001
<b>Enrico Group</b>	<b>Norton</b>	62821-002
10399	101M	<b>Weil McLain</b>
<b>Goodman/Janitrol</b>	201D	29074
B1172606	201K	511-330-139
B1193939	201L	511-330-190
B1401009	201M	511-330-193
B1401015	201P	<b>White Rodgers</b>
B1401018	201W	767A-301
<b>John Woods/GSW PV</b>	271D	767A-303
<b>Water Heaters</b>	271M	767A-306
86483	271N	767A-310
<b>H.B. Smith</b>	271NM	767A-311
50018	271P	767A-350
<b>Hupp Industries</b>	271R	767A-353
9050	271RS	767A-354
	271W	767A-357
<b>ICP/Heil/</b>	<b>Rheem Rudd</b>	767A-361
<b>Arcoaire Comfortmaker</b>	62-22868-93	767A-364
<b>Tempstar</b>	62-22441-01	767A-365
<b>Keeprite</b>	62-22868-82	767A-366
1096047	<b>Roberts Gordon</b>	767A-370
1096048	90434300	767A-371
1009604	90436600	767A-372
1001344	<b>Robertshaw/Uniline</b>	<b>WILLIAMSON</b>
1380680	41-238	09050
1148245	41-242	<b>YORK</b>
<b>Integra</b>	41-402	025-32626-000
6905032	41-403	473-12509-001
3260618	41-404	373-09154-700
<b>Johnstone</b>	41-405	025-27774-000
L37-699	41-407	025-29043-000
L37-700	41-408	025-29050-000
L37-812	41-409	025-27766-000
L37-814	41-410	025-30277-000
L37-815	41-412	025-32638-002
L37-816	41-414	025-32625-000
<b>L.B. White Co.</b>	41-1090	025-31801-000
120-07549		373-05342-700
<b>Lennox</b>		
33J3701		

1007 South 12th Street  
 PO Box 170  
 Watertown WI 53094  
 1-877-227-6427 (1-877-BASOGAS)

www.baso.com  
 Printed in the U.S.A.