


63499 Series Extension Kit

To assemble the 63499 series extension to the thermocouple, follow the steps below.

- 1. Slide sleeve (item 2) Into 63499 extension (item 1).
- 2. Slide heat shrink tube (item 3) over collar part of 63499 extension.
- 3. Screw thermocouple assembly (item 4) into the collar of (item 1) 63499 extension.
- 4. Slide heat shrink tube (item 3) over collar connection assembly.
- 5. Heat the outside of the heat shrink tube (item 2 to secure the connection). Ensure the heat shrink covers the whole connection before heating.

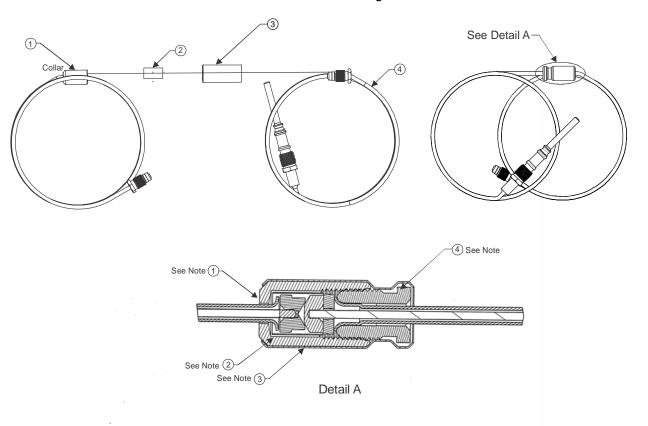

450 East Horseshoe Road PO Box 170 Watertown, WI 53094 1-877-227-6427 (1-877-BASOGAS)

www.baso.com Published in U.S.A.